

ZuhauseTV Fernbedienung

TV-Codetabelle

ZuhauseTV Fernbedienung

TV-Codetabelle

A

Marke	TV-Code
Accent	301 231 211 022 010
Accuphase	231
Acer	735 589 205
Acoustic Solutions	251 142 115 113
Action	317 200 175 022 005
Acura	487 486
Adcom	224
Adler	675 659
Admiral	477 381 318 187 088 052 046 022 005
Advent	800
Adventura	030
Adyson	384 325 324 200 180 005
Aea	231 211 030
Aeg	299 309 295 030
Agashi	325 324 318
Agath	802 801
Agb	180
Agef	187
Aiko	325 322 318 301 231 228 010
Aim	312 309 239 231 211 010
Airis	874 848 847 846 803
Aiwa	738 737 736 551 340 177 173

Marke	TV-Code
Akai	072 551 364 084 666 639 603 508 501 328 325 323 318 312 309 301 296 247 228 200 198 197 193 180 117 102 100 010
Akashi	301
Akiba	231 211 197 010
Akira	470
Akito	231 211 010
Akura	541 318 301 296 231 211 197 022 010 005
Alaron	324
Alba	568 366 328 324 301 296 198 197 194 180 134 122 119 092 052 010
Albiral	135
Alden	849
Alfa	005
Alien	010
Allorgan	325 206 180 156
Allstar	231 211 010 005
Allview	825
Alpha	892 850 659
Alpha Digital	876 875
Alphatronics	851
Altek	804
Altius	639
Altus	625
Ambassador	390 030
American High	317
Amitech	805
Amoi	544

Marke	TV-Code
Amplivision	325 180 092
Amstrad	318 301 231 211 199 144 102 075 022 010
Anam National	301 231 211 188 010
Andersson	295
Anga	390 030
Anglo	318 301 022
Anitech	384 318 301 231 213 200 197 086 010
Ansonic	301 231 216 213 211 205 092 052 022 010
Antarion	051
Aoc	352 820 819 329 250 200 005
Ar System	387 231 211 140
Arc En Ciel	221 217 196 175 171 165 164
Arcam	325 324 217 180
Arcelik	625
Arcon	295
Arctic	625
Ardem	296 231 211 010
Arena	328 010
Arielli	659 637
Aristona	231 211 205 010 005
Arstil	625
Art Tech	005
Artel	508
Arthur-Martin	062 052 050
Asa	381 246 187 186 109 108 085 052

Marke	TV-Code
Asberg	231 213 211 123 086 010 005
Asora	301 022
Aston	353
Astra	231 211 022 010
Astell	414
Asuka	325 324 318 197 180
Atashii	551
Atd	239
Atec	806
Atlantic	324 261 231 211 156 010 005
Atori	301 022
Atoro	022
Auchan	062 052 050
Audiosonic	666 325 318 301 296 279 231 216 197 180 171 092 010
Audioton	325 318 180 092 022
Audiovox	005
Audioworld	239
Aumark	317
Autovox	381 325 206 187 184 180 156 079 010
Avtex	077
Awa	342 325 318 309 301 299 210 202 014
Axen	852
Axitronic	412
Axxent	301
Axxon	296

ZuhauseTV Fernbedienung

TV-Codetabelle

B

Marke	TV-Code
Baird	325 312 309 171 168
Bang & Olufsen	426 381 187 186 155
Barco	052
Basic Line	325 301 216 197 052 010
Bastide	325 180
Bauer	318 301 239 102
Bauhn	639
Baur	322 301 231 228 225 222 211 108 102 101 079 032 010
Bazin	325
Bbk	741 724 451 299 267 266 265 264
Beaumark	247
Bec	180 005
Becrese	200 193 175 108 030 005
Beko	625 666 309 296 279 172 107 092 010
Bell & Howell	005
Belson	319
Belstar	010
Benchmark-Beaumark	317 200 022 005
Benq	515 157 099
Beon	231 211 123 010 005
Berlin	625
Best	092
Best Buy	854 853 253

Marke	TV-Code
Bestar	231 216 211 092 050 010 005
Bestar-Daewoo	216
Bexa	362
Bigston	022
Binatone	325
Black Diamond	295 231 010
Black Panther	213
Blackstripe	317 193 108
Blauberg	551
Blaupunkt	366 311 228 198 197 106 102 101 100 098 067
Blomberg	625
Bloom	010
Blu:Sens	244
Blue	508
Blue Sky	541 319 296 279 231 211 197 010 005
Bogo	637
Bolva	568
Bondstec	325 301 206 184
Bose	496
Bpl	282 231 211 010
Brandt	788 639 329 224 221 219 217 196 175 165 164 158 147 146 145
Braun	268
Brendstar	022
Brignton	679 253
Brimax	541
Brinkmann	231 211 123 010 005

Marke	TV-Code
Brionvega	295 231 211 187 075 010 005
Briorryega	381 005
Britannia	325 324
Brockwood	390 200 193 030
Broksonic	200 193 030
Brother	318
Bruns	381 187
Bsr	322 206 052 050 015
Btc	197
Bush	352 328 666 603 500 385 325 322 318 312 301 296 239 231 216 207 198 197 194 180 134 095 068 010

C

Marke	TV-Code
Cameron	257 254 253
Cample	390 200 193 030
Canal	416
Canca	893
Candle	200
Capehart	200 193 005
Capsonic	318
Carad	231 211 010
Carena	231 211 010
Carrefour	231 211 194 010 005
Carver	311 005
Cascade	301 231 211 010
Casio	231 211 079 052 010
Cathay	231 211 010 005

Marke	TV-Code
Cce	325 231 211 010
Cci	103
Celcus	328
Cello	467 632 463
Centurion	474 231 211 010 005
Century	381 229 187 185 184
Cetomer	424
Cge	217 185 184 123 092 086 056 052 022
Cgm	197 022
Cgv	410
Changhong	828 683 680 508 273 238 033 001 681 005
Chiq	508
Cie	216 102 022
Cihan	005
Cimline	301 198 022
Cinex	005
Circuit City	390 200 193 030
Citizen	317 200 005
City	301 022
Clairtone	328
Clarivox	231 213 211 184 182 126 010
Class Hd	743
Clatronic	325 318 309 301 296 231 213 197 185 184 180 092 086 050 010
Clayton	209 328
Cme	078
Cms	324

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Cms Hightec	325
Cmx	807 622
Coby	431
Colortyme	317 005
Colossus	637
Comgenius	527
Computron	022
Concorde	301 022
Condor	324 318 301 231 213 184 092 052 010
Conia	808
Conic	200 193 005
Conrac	133
Conrad	231 211 010
Contec	324 318 301 231 210 197 194 010
Continental Edison	221 217 196 175 165 164 146 145 025
Coocaa	622
Corfug	358
Coronado	200
Cosmel	301 231 211 022 010
Craig	457 005
Crosley	381 193 187 185 184 086 057
Crosswood	010
Crown	312 310 309 301 296 279 200 092 086 050 010
Crystal	005 001
Cs Electronics	324
Ctc	184

Marke	TV-Code
Ctc Clatronic	123
Curtis Mathes	317 200 193 046 005
Cybertron	180

D

Marke	TV-Code
Daenyx	501
Daewoo	325 301 296 239 231 216 200 180 141 136 132 023 021 019 010
Daewoo Electronics	167 128
Daichi	022
Dainichi	324 197
Dansai	325 324 318 312 301 231 211 200 194 010
Dantax	309 296 279 092
Darling	452
Datsura	312
Dawa	301 231 211 010 005
Daytek	318 239
Daytron	301 231 216 211 200 108 022 010
Dce	010
De Graaf	323 312 052
Dec	603
Decca	325 231 211 210 192 180 133 124 010 005
Deitron	231 216 211
Delton	010
Denko	318

Marke	TV-Code
Denver	877 864 863 541 523 320 309 231 211 022 010
Desmet	301 231 211 187 022 010 005
Dexp	783 624 508
Dgm	329
Dgtec	898
Diamant	231 211 010
Diamond	324 318 301 239 022
Diboss	231 211
Dick Smith	366 299
Digihome	328 010
Digiline	231 211 010
Digilogic	328 010
Digimate	809 498
Digiquest	897 637 328
Digistar	513
Digital	273 005
Digitalbox	474
Digitor	322 236 231 211
Dik	231 211 010
Dikom	810
Disney	811
Distar	256
Dixi	325 301 231 211 187 022 010 005
DI	603 320
Dmtech	623 010 328
Doric	081 079
Dsc	299
Dse	428 299 242 241 238 237 014

Marke	TV-Code
Dual	525 348 328 325 301 261 217 197 180 168 090 079 010
Duinamai	355
Dumont	381 325 246 213 200 193 187 180 135 030
Dunai	052
Durabrand	010
Dux	231 211 205 010
Dvico	361
D-Vision	231 211 010
Dynamic	022
Dynatech	390 200 193 180 030
Dynatron	231 211 205 010
Dynex	610 609 608 606 604 603 602 601 600 451 370
Dyon	551

E

Marke	TV-Code
E:Max	309
Eaton	317
Ecco	239
Ecg	878 855 590 329 299
Ecr	193
Edison	171 328
Eduk	328
Eksperten Vest	078
Elbe	328 325 322 231 229 228 226 182 100 092 010
Elbit	005

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Elcit	381 213 187 184 052
Elecs	005
Electratune	200
Electriq	328 072
Electro	030
Electro Tech	022
Electrohome	390 200 193 030
Electron	508
Electronics	197 184
Elektronika	005
Elekta	318 301 273 231 211 022 010
Elektra	637
Elektrabregenz	625
Element	643 568 732
Elenberg	256 252 251
Elfunk	328
Elg	231 211 010
Elin	324 323 301 246 231 108 010
Elit	551
Elite	317 231 211 200 197 193 010 005
Elkos	856 328
Elmak	014
Elman	213 172 168 135 050
Elta	324 318 301 050 022
Emerson	322 296 231 200 193 187 092 030 010
E-Motion	541 366
Energy Sistem	234 233

Marke	TV-Code
Engel	626
Enie	508
Enox	215
Eon	317 193
Epc	386 133
Ergo	783
Erison	547 327 037
Erres	231 211 205 010 005
Esc	325 231 211 010
Estar	637
Estele	052
Eternity	366
Etron	301 300 231 211 052 022 015 010
Eurofeel	325 318
Euroline	430 413 328 218
Euroman	325 324 318 231 211 180 092 010 005
Europa	231 211 010
Europhon	325 231 213 184 180 135 052 010
Eurosky	010
Excel	231 211 010
Expert	261 156 121 062 052 050
Exquisit	231 211 010
Eye Tv	343

F

Marke	TV-Code
F&U	637 329 327
Fairtec	319
Family Life	231 211

Marke	TV-Code
Favorit	328
Fenner	301 216 022
Ferguson	366 344 328 323 231 224 223 219 182 160 125 111 105 010
Ffalcon	547 327
Fidelis	022
Fidelity	324 322 318 231 211 069 052 050 015 010
Filsai	325 022
Finlandia	323 322 312 168 147 145 082 052 015
Finlux	812 713 328 325 296 279 246 213 180 120 109 010
Firstline	666 325 322 319 312 301 296 229 216 213 206 184 180 010
Fisher	381 325 322 312 246 195 187 180 092 018
Flavel	625
Flint	318 231 211 010 005
Fnr	213
Formenti	381 324 231 211 187 180 067 052 014 010 005
Fortress	381 200 193 187 046
Fox	661 659 637 363 329
Fraba	231 211 092 010
Friac	301 231 213 211 092 010

Marke	TV-Code
Frontech	325 318 301 200 184 180 079 052 050 022
Fuba	130
Fuji	721 211
Fujicom	551
Fujitsu	325 322 301 261 231 213 200 193 180 156 030 010
Fujitsu Siemens	295
Funai	328 010 318 206 200 193 030 022
Furrion	655 551
Fusion	051
Futronic	318 239
Future	231 211

G

Marke	TV-Code
Gaba	450 209
Galaxis	322 231 213 211 196 123 092 052 010
Galeria	301 022
Gbc	301 216 180 057 052 050 022 015
GE	223 158
Géant Casino	062 052 050
Gec	325 322 231 212 180 133 010
Gelhard	328
Geloso	301 216 197 185 184 052 050 022
Gemsound	022
General	219 171 145 022
General Deluxe	449

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
General Technic	301 022
Genesis	301
Genexxa	301 231 211 197 052 010 005
Giant	325 301
Gitem	175 147 101 005
Globalstar	842
Gm	022
Gmg	123 022
Gogen	328
Goldhand	324 022
Goldstar	891 325 322 317 309 301 300 296 231 211 206 200 184 180 171 129 101 100 092 088 010
Goodmans	555 666 467 461 445 328 325 318 301 296 224 223 216 194 180 158 134 010
Gorenje	328 092 010
Gpm	197 022
Gradiente	311 310 231 211 010
Graetz	328 322 296 295 231 211 082 052 010
Granada	325 323 312 231 224 205 194 180 158 112 030 027 010
Grandin	508 301 298 297 296 290 288 287 283 282 281 279 275 222 216 197 140 121 052 022 021 012 010 005
Grenadier	022

Marke	TV-Code
Gronic	325 213 052
Grundig	682 625 666 657 337 328 010
Grunkel	637 295
Gtmedia	840
Gtt	123 022
Gva	886 363
Gze Unimor	089

H

Marke	TV-Code
Haier	663 244 778 776 774 773 768 767 766 765 763 760 757 727 348 340 328 320 299 008 780 779 772 771 759 758 631 536 456 366 352 318 289 239
Haier (Roku Tv)	663
Halifax	325 324 318
Hallmark	390 200 193 108 030
Hamburg	625
Hammerstein	318 317
Hampton	180
Hannspree	352 745 648
Hanseatic	325 322 301 296 206 187 101 092 090 014 010
Hantarex	301 231 213 211 180 022 010 005
Hantor	231 211 010
Harley Davidson	390 317 212 200 193 030
Harper	622
Harrad	390 200 193 030

Marke	TV-Code
Harvard	390 200 193 030
Harwood	301 231 211 010
Hauppauge	231 211 010
Hcm	325 318 301 231 211 197 180 022 010
Heathkit	030 005
Hedzon	231 211 010
Hema	325 301 180
Hemmermann	079 028
Hifivox	221 217 196 175 171 165 164
Higashi	324
High	317
Highline	318 231 211 010
Hiline	022
Hinari	318 312 231 197 194 052 022 010
Hisawa	296 197
Hisense	624 663 594 798 782 781 775 774 773 770 769 764 762 761 756 755 753 752 751 750 734 712 602 489 153 002 312
Hit	187
Hitachi	796 543 532 483 328 010 325 323 247 202 194 182 171 165 108 030
Hitachi Fujian	202
Hitech	237
Hitsu	301
Hkc	551 029
Hmv	187

Marke	TV-Code
Höher	508 296 295 010 328
Home Electronics	309
Horizon	887 637
Horizont	695 263 260 015 014 005
Hornophone	231 211 205 005
Hoshai	197
Hot	750
Huanyu	324 216
Humax	231 331 330
Huspi Elektronik	123
Hygashi	325 324 180
Hyper	325 324 301 206 184 180 022
Hypersonic	322
Hypervision	395
Hypson	325 318 296 279 231 229 211 180 022 010 005
Hyundai	561 771 603 551 479 342 328 239

Marke	TV-Code
Iberia	231 211 010
Ibervisao	050
Ice	325 324 318 301 231 211 197 180 022 010 005
Icos	205
Ict	231 211 010
Iiyama	676
I-Joy	637 253
Ikea	888 813 547

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Ima	390 200 193 030
Imarflex	643
Imperial	322 231 185 184 092 086 010
Indiana	231 211 010 005
Infiniton	329
Infinity	005
Infocus	569
Ingelen	322 296 279 052
Ingersoll	301 022
Inno Hit	325 301 231 213 197 180 088 022 010 005
Innova	211
Innovation	231 211 010 005
Insignia	505 609 603 610 370 604 451 602 601
Inter	575
Interactive	322 231 221 211 205 187 171 092 052 010
Interbuy	384 318 301 231 211 184 022 010
Interdiscount	175 147 145 005
Interfunk	381 322 231 221 205 189 188 186 184 171 092 010
Internal	231 216 211 010
International	324
Intervision	384 325 318 301 231 228 213 197 184 180 092 052 010
Inves	637
Irbis	327
Iris	547

Marke	TV-Code
Irradio	301 231 211 206 197 184 088 083 022 010 005
Isis	328
Ist	197 180 005
Isukai	231 211 197 010 005
Itc	325 180 050
Itl	022
Its	324 318 301 231 211 197 180 022 010
Itt	328
Itt Nokia	323 322 312 309 108 079 060 052 050 015
Itv	318 231 216 211 010
Izumi	728

J

Marke	TV-Code
Jacson	383 133
Jay-Tech	821 329
JBL	005
Jcb	030
Jean	194
Jec	001
Jetpoint	317 005
Jinlipu	022
Jmb	328 231 216 211 010
Jocel	425 239 026 009 008 005
John Lewis	328
Jtc	639

Marke	TV-Code
Julibee	231
Jumbotronic	005
JVC	402 310 748 783 547 527 328 309 194 188 066 046 045 033 029 005
Jwf	309

K

Marke	TV-Code
Kaido	050
Kaiser	005
Kaisui	325 324 301 231 211 197 180 022 010 005
Kambrook	145
Kamp	324 180
Kapsch	322 261 156 081 052 047
Karcher	666 318 309 296 231 213 211 092 052 022 010 005
Kathrein	231 211 010
Kawasho	324
Kb Aristocrat	052
Kc	595
Kendo	328 231 222 213 198 156 092 075 022 010
Kenmark	356
Kennedy	261 156 075 052
Kennex	010
Kenstar	754
Kenwood	200
Kic	325
King	723 677

Marke	TV-Code
Kingsley	324
Kiota	300 022
Kiton	231 211 010
Kivi	402
Klh	390 200 193 030
Kloss	317
Kneissel	231 229 216 211 100 092 090 089 010
Kobic	022
Kogan	739 637 542 541 538 537 536 534 508 370 342 299 243
Kolster	231 213 211 079 010 005
Konichi	301 022
König	474 164 163
Konka	370 320 010 665 296 197
Kontech	792
Korpel	231 211 010 005
Körting	381 189 187 186 092
Kosmos	231 211 010
Kotron	318
Koyoda	301
Kpn	894 469
Kraking	229
Kreisen	456
Kriesler	205
Krüger & Matz	299
Ktc	771
Ktv	325 200 193 180 030

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Kuasho	200 005
Kuba	079 052 028
Kunft	857 637
Küppersbusch	
Kyoshu	318
Kyoto	325 324 052

L

Marke	TV-Code
L&S Electronic	296
Lamont	180
Lasat	092
Lavis	052 010 328
Leader	301 022
Lecson	231 211 010
Legend	301 022
Leisure	625
Lenco	366 329 320 301 231 216 211 052 024 022 010 005
Lenoir	301 022
Lenson	408 430
Lesa	184
Letv	552
Level	879 817 816 815
Levis Austria	231 211 010
Leyco	318 231 211 206 010 005
LG	244 891 642 010 754 749 328 326
Liesenkötter	231 211 205 005
Life	022
Lifetec	318 301 296 231 216 211 022 010 005

Marke	TV-Code
Linden	299
Linitron	200 193
Linsar	328 209 080 010
Listo	328
Lloyd	624 390 200 193 081 030 022
Lloyd'S	301 300 022
Lobod	637
Loewe	789 448 718 381 190 187 180 092 010
Logik	577 402 733 634 633 631 583 551 328 318 317 301 300 299 253 210 010
Logix	005
Lowry	652
Luma	301 261 231 216 156 075 010
Lumatron	325 322 318 231 211 052 010
Lux May	301 231 211 010 005
Luxor	328 325 323 312 120 118 088
Luxor Salora	166
Luxor/Skantic	076
Lxi	247 005

M

Marke	TV-Code
Macys	200 193
Madison	231 211 010
Magic Queen	547

Marke	TV-Code
Magnadyne	381 213 187 185 184 180 057 022 005
Magnafon	324 213 180 135
Magnasonic	200 022 005
Magnavox	194 010
Magnum	296 279 231 211 016 010
Majestic	639
Mandor	318
Manesth	325 318 231 211 198 180 052 010 005
Manhattan	494 231 211 052 010
Manta	679
Marantz	231 211 010 005
Marcy'S	193
Marelli	381 187
Mark	325 324 301 296 279 231 216 211 010 005
Marks & Spencer	632 467
Mascot	184
Masimo	787 786 329
Masuda	325 318 301 231 211
Matsui	420 385 325 312 301 296 228 221 210 207 198 194 180 158 139 102 100 079 025 023 010 328
Matsushita	188
Matsuiama	320
Mava	200
Maxam	318 022

Marke	TV-Code
Maxdorf	318 239
Maxell	022
Maxess	377
Mce	301 022
Mcmichael	212
Mediasonic	486
Mediator	231 211 205 010 005
Medion	328 297 296 239 059 054 020 010
Megasat	826 636
Megatron	247
Mei	010
Melectronic	325 322 301 296 246 231 228 216 180 175 172 171 168 118 112 108 022 010 005
Memorex	317 301 188 030
Memphis	301 022
Mercury	318 317 301 300 239 231 211 022 010
Merritt	323 322 052
Metronic	895 418
Metz	622 381 297 228 191 188 186 102 101 100 098 093 010 007 003 00
Mga	231 030
Mi	799
Micromax	794 547 370 299 011
Micromaxx	231 211 010
Microtek	318 239
Microvision	824

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Midi	637
Midland	200
Mikomi	666 295
Minato	231 211 010
Minerva	228 202 103 102 101 100 098
Minoka	357 231 211 010 005
Mirai	899 865 814
Mitashi	637
Mitchell & Brown	328
Mitsai	885 645 508 328 010
Mitsubishi	839 797 381 312 247 202 195 187 046 030 022 010
Mitsuri General	052
Mivar	325 183 127 092 090 089 088 087
Mobile TV	328
Monaco	301
Monitor	317
Morava	010
Morgan'S	231 211
Motorola	844 046 005
Mpman	636 551
Mtc	366 324 322 317 299 200 092 005
Mtlogic	666 296
Müller	637
Multimedia	389
Multistandard	213
Multitech	325 318 301 231 213 200 193 180 092 086 079 030 010

Marke	TV-Code
Murphy	546 324 246 081 052 493 491 485 328
Muse	858
Musikland	231 211 010
Mycom	247
Myryad	231 211 010
Mystery	329 299

N

Marke	TV-Code
Nabo	328
Nad	322 247 193 052 010
Naiko	309 231 211 010 005
Nakamichi	551
Nakimura	231 216 211
Namsunc	022
Naonis	052 050 015
Nap	005
National	027 005
Navon	328
Nec	740 506 340 325 320 317 310 301 216 210 194
Neckermann	381 325 231 225 222 187 101 092 079 067 038 032
Nei	231 211 197 138 052 005
Neo	637 249
Neon	731 730 729
Nesco	184
Net Tv	880
Netsat	231 211

Marke	TV-Code
Neufunk	301 296 231 211 010
Nevir	788 592 328 159
New Tech	325 301 231 211 168 022 005
New World	197
Newsat	406
Next	328
Nicamagic	324
Nikai	256
Nikkai	325 324 318 301 231 211 200 197 194 005
Nikkei	296
Nikko	247 137
Nissan	317
Nobel	547
Noblex	022 018
Nobliko	324 213 180 135 086 083
Nodis	637 328
Nogamatic	221 217 196 175 171 165 164
Nokia	398 323 317 312 309 216 197 171 120 116 114 022
Nokia Akai	070
Noname	385 382 245 050 005
Nordic	325
Nordmende	896 666 381 328 296 231 223 221 219 217 196 165 164 162 158 052
Norfolk	052
Normande	329

Marke	TV-Code
Normerel	231 211
Nova	246
Novabeam	005
Novak	205
Novatronic	231 216 211 022 005
Npg	639 508
Nucleonic	050
Nurnberg	322 052
Nu-Tec	239

O

Marke	TV-Code
Oceanic	323 312 206 121 120 118
Odeon	318
Odys	366 230 227 204
OK	508 882 881 592 402 366 328
Okano	364 363 318 301 231 211 092 022
Oki	587 363 328 010
Olimpo	845
Olympic	022
Omega	318 239
Onceas	022
Onida	795 564
Onn	541 328
Onwa	213 197 180
Onyx	541
Opera	666 231 211 005
Opticum	868 867 866
Optimus	188
Optonica	046

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Orange	744
Orava	897 366 328 209
Orbit	231 211 005
Orient	022
Orima	328
Orion	568 791 527 010 328 296 213 210 050 030
Orline	231 211
Ormond	231 211
Osaki	325 318 231 216 211 197
Osio	231 211
Oso	197
Osume	231 211 194 193
Otake	198
Otf	022
Otto Versand	325 322 231 206 194 180 175 171 067

P

Marke	TV-Code
Pacific	296 231 211 010 009
Packard Bell	453
Pael	324 083
Palladium	381 325 296 231 228 225 187 180 102 101 100 092 079
Palsonic	511 506 512 366 365 329 325 318 300 231
Panama	325 324 318 301 231 211 184 180 022

Marke	TV-Code
Panashiba	300 022
Panasonic	793 629 303 510 489 010 777 507 328 306 304
Panavision	231 211
Panavox	022
Panda	890
Panorama	022
Panoramic	175
Pasomins	603 022
Pathe Cinema	324 229 092 090 089 079 052 050
Pathe Marconi	221 217 196 175 171 165 164
Pausa	301 022
Pce/Pec	390 317 200 193 108 030
Pdp	368
Peaq	859
Peerless	785 784
Pendo	739 636 508 013
Penney	317 200
Perdio	324 231 211 052
Perfekt	231 211 005
Performance	193 030
Philco	381 231 211 193 187 184 123 092 086 052 022
Philex	052
Philharmonic	325 180
Philips	326 566 231 328 790 012 010 208
Phocus	666 296
Phoenix	381 324 231 211 187 092 052 005

Marke	TV-Code
Phonola	381 324 231 211 205 187 005
Pilot	317 231 211
Pioneer	562 838 322 321 231 181 175 171 096 092
Pixel	439
Plantron	318 301 231 211 022 005
Playsonic	325 296 279
Polar	727 014
Polaroid	622 328 253
Policom	322 229 221 213 187 175 171 052
Poppy	301 022
Portland	216 200 030
Powerpoint	239
Prandoni-Prince	322 184 180 083 050 015
Precision	325 180
Premier	318 301
Prestigio	822
Prima	559 509 845 551 318 317 301 200 193
Princess	239 022
Princeton	328
Prinz	322 079
Proelco	005
Profex	322 301 086 052 050 022
Profi	301
Profitronic	231 213 211 005

Marke	TV-Code
Proline	823 508 454 363 295 231 224 211 205 105 097 033 010 328
Proscan	317
Prosonic	666 541 325 324 296 231 216 211 092
Protec	184 180 022 005
Protech	325 318 301 231 213 211 079 052 010
Proton	247 200 022
Provision	296 231 211
Pulser	317 200 175 022 005
Pvision	319
Pye	231 216 211 205 187 079 005
Pymi	301 022

Q

Marke	TV-Code
Qilive	637 328
Qmax	551
Qty1	015
Quadro	603 010
Quasar	301 188 184
Quelle	325 322 318 261 246 231 210 088 085 038
Questa	194 193
Quiero	225

R

Marke	TV-Code
R Line	231 211 005

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Radialva	231 211 175 171 145 052
Radio Shack	231
Radiola	325 231 211 205 005
Radiomarelli	381 231 211 187 184 180
Radionette	081 050
Radiotone	318 301 231 211 092 022 010 005
Radix	528
Raduga	015
Rank	081
Rank Arena	194
Rasonic	841
Rca	592 317 224 158 046
Realistic	247
Recco	327 250
Recor	231 211
Rectiligne	231 211
Red Star	231 211
Rediffusion	323 322 194 081
Reflex	231 211
Reflexion	366 329
Regente	022
Relisys	368 253 010
Reoc	296
Revox	231 211 092 005
Rex	318 261 185 184 156 090 089
Rft	381 318 231 211 187 092 091 090 089
Rhapsody	324 180

Marke	TV-Code
Rice Club	317
Ricoh	231 211
Rinex	318 239
R-Line	052
Rmb	200
Rm-U301	222
Roadstar	603 345 318 301 296 231 211 197 022 010
Robotron	187
Rodex	231 211
Roku Tv	663
Rolsen	726
Rosita	022
Rosner	180
Rowa	239 325 324 320 318 301 022
Royal	309 022
Royal Lux	158 092
Rubin	260 015 005
Rukopir	231 211
Runco	317

S

Marke	TV-Code
Saba	508 381 366 328 323 221 219 217 187 180 165 164 146 010
Saccs	229
Sadko	015
Sagem	409 313 222
Saisho	325 318 301 210 198 180 102 052 005

Marke	TV-Code
Saivod	295 231 211
Sakai	052
Sakio	022
Salora	637 328 323 312 148 120 118 117 088 010
Salsa	158
Sambers	213 180 135 088 086 083
Sampo	200
Samsung	270 010 244 200
Samsux	200
Samus	827 508
Sandra	325 324
Sanela	229
Sang	637 296 279 005
Sanky	200
Sansui	508 317 231 200 022
Santon	301
Sany	145
Sanyo	616 506 644 328 325 311 301 246 231 210 195 133 106 092 090 089 010
Saso	175
Save	231 211
Sbr	231 212 211 205 005
Sceptre	595
Schaub Lorenz	417 329 328 323 319 309 296 216 179

Marke	TV-Code
Schneider	695 673 637 325 322 296 261 209 206 205 197 184 182 168 090 072 022 016 010 328
Schontech	328
Scotland	052
Scott	390 346 247 200 193 030
Sedea	542
Seeview	637
SEG	717 325 318 301 296 213 200 194 184 180 086 010
Sei	231 225 222 213 211 187 079 052
Seiki	568
Sei-Sinudyne	381 231 225 222 213 206 198 187 102 075 030
Seizo	568 342
Selecline	637 328
Seleco	318 261 166 156 154 147 089 055 010
Semua	200
Sencor	666 739
Sencora	301 022
Sentra	301 238 197 079 015
Serino	324 046
Sharp	366 352 347 272 836 835 834 833 832 720 708 328 194
Shintom	030
Shintoshi	231 211

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Shivaki	725 388 247 231 216 211 010 005
Shorai	206
Show	318 301 239 022
Siarem	381 213 187 180 135 057 052 050
Sicatel	121 092
Sice	094
Siemens	322 231 228 211 200 193 103 102 101 100 078 067
Siera	320 231 211 205 092 005
Sigmatek	405
Sigmax	317
Signature	030
Silva	324 322 231 211 022
Silver	322 279 231 211 197 194 193 052
Silvercrest	328 209 010
Simply	551
Singer	381 301 231 213 187 185 184 158 135 121 073
Sinodyne	005
Sinotec	309 239
Sinudyne	322 309 225 222 213 187 005
Siragon	372
Sky	247 231 211
Skymaster	870 869 413
Skytech	860 328
Skyworth	622 005
Slx	404 403
Smaragd	025

Marke	TV-Code
Smart	873 872 871
Smart Tech	637
Snyder	005
Soaiy	576
Sogo	637 329
Sokol	261 015
Solavox	323 322 231 211 052 050 015
Sonic	375
Soniko	231 211
Soniq	378 375 374 372 371 370 369 364
Sonitron	325 312 108 092
Sonneclair	231 211
Sonoko	637 325 318 301 231 211 180 022 005
Sonolor	323 312 225 222 121
Sontec	301 231 211 092 005
Sony	340 585
Sound & Vision	231 216 213 211 197
Soundesign	390 317 247 200 193 030
Soundmaster	022
Soundwave	279 231 211
Soyo	541
Spectra	301 216
Spectrician	200 005
Ssangyong	301
Staksonic	301
Standard	541 325 301 231 216 211 197 180 022

Marke	TV-Code
Star	184
Star Sat	742
Starlight	237 788
Starlite	318 301 231 211 052 022
Starlux	022
Stella	861 482 340 231
Stern	318 261 156 090 089 075 058 052 015
Strato	318 301 231 211
Stream System	771
Strong	843 622 547 402 295
Strrview	422
Stylandia	325
Sungoo	020
Sunic Line	231 211
Suniya	771
Sunkai	231 211 206 198 197
Sunny	695 508
Sunrise	275
Sunstar	318 301 231 211 022
Sunstech	637 299 328
Sunwood	301 231 211 022 005
Super General	256
Superior	456
Superla	325 324
Supersonic	318 312 301 239
Supertech	324 301 231 211 034 022
Supervision	318 239

Marke	TV-Code
Supra	884 883 771 551 508 450 358 301 247 238 216 022
Supremacy	200 193
Supreme	030
Sure	184
Susumu	158 145
Sutron	301 022
Sva	318 239
Svan	328
Svasa	318 312 239
Swisstec	366
Syc Line	022
Sydney	325 324 180
Sylvania	193
Symphonic	200 193 030
Sysline	231 211
Sytong	324

T

Marke	TV-Code
Tandberg	322 175 171 094 093 075 052
Tandy	325 197 184 180 052 046
Tashiko	325 324 311 212 194 193 180 052
Tatung	560 558 325 319 231 210 180
Tcl	547 818 663 549 548 327 257
Tcm	666 296
Td	328
Td Systems	328 637

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Teac	325 318 311 301 296 247 239 231 211 079
Teak	022
Tec	325 322 301 261 231 219 216 184 180 158 138
Techline	328 295 231 211 010
Technical	209 010
Technics	188 027 005
Technika	590 366 536 454 348 328 161 010
Techniland	005
Technisat	701 231 211 143 133 052
Technisson	296
Technol	022
Technol Ace	324 318 239
Technosonic	603
Techwood	328 317 295 030 010
Tecnimagen	296
Tecnison	022 010
Teco	746
Tedelex	541 325 320 312 309 301 239 231 211 022
Teiron	301
Tek	301 239
Teknant	022 005
Teknika	317 200 030
Tekon	317 022
Tele System	862 456 328 061
Teleavia	221 217 196 178 171 165 164

Marke	TV-Code
Telecor	325 231 211 052
Telefac	022
Telefunken	328 419 551 771 520 603 320 239 219 170 158 030
Telefusion	231 211
Telegazi	318 231 211 052
Teleka	328
Telemeister	231 211
Teleopta	022
Telerent	005
Telesonic	231 211
Telestar	301 231 211 022
Teletech	408 301 231 211 184 022 010 328
Teleton	325 261 194 180 156 079 052 015
Televideon	324 052
Television	231 211
Televiso	121
Telexa	213
Teliva	175
Tempest	318 301 231 211 022
Tennessee	231 211
Tensai	325 301 279 246 216 206 197 180 129 108 052 010
Tenson	301
Tesla	719 673 672 671 622 397 296 279 235 231 222 211 209 010 005
Tevion	296 231 211 010 005

Marke	TV-Code
Texet	325 324 301 216 180
Thomas	317 200 175 030 022 005
Thomson	547 831 830 707 549 548 519 491 324 255 219 217 176 031
Thorn	716 322 263 246 238 231 229 225 222 216 205 202 195 182 158 133 125 109 108 106 101 083 030 004
Thorn-Ferguson	716 322 229 202 182 158 125 005
Tmk	317 247
Tobo	022
Tokai	325 301 231 216 211 052 005
Tokyo	324 317 275
Tongtel	320
Top Show	318 301 239
Topline	010
Toshiba	002 599 612 680 328 240 010 001 313 296 239
Tosonic	317 200
Tosumi	837 105
Totevision	200
Towada	325 213 079 050
Toyoda	318 301
Trakton	325 318 301
Trans Continents	325 231 211
Trasonic	320 318 301 239 231 211
Transtec	324

Marke	TV-Code
Trc	197 022
Trevi	637 022
Triad	301 231 211 005
Triax	651 430
Trident	325 180
Trilux	005
Tristar	318 197
Triumph	231 211 102
Trivision	022
Tucson	010
Turbo-X	637
Tvtext 95	231

U

Marke	TV-Code
Uher	261 231 216 211 156 092 035 034 005
Ultravox	381 324 231 216 213 187 185 184 180 057
Uma	175 145 081 050 005
Unic Line	231 211 079
Uniden	592 547 328 027 010
Unimade	413
Unimor	005
United	328 320 296 279 231 211 207
Universal	296
Universum	526 325 322 318 313 311 301 246 225 222 221 210 194 184 171 156 134 112 108 101 092 010 328

ZuhauseTV Fernbedienung

TV-Codetabelle

Marke	TV-Code
Univox	231 229 211 187 052 050
Upc	747
Upstar	613 596
Uranya	022
Utax	052

V

Marke	TV-Code
V7 Videoseven	247
Vanguard	022 328
Vd Tech	329
Vdigi	592
Veco	022
Vector Research	889
Vega	722
Venturer	169
Veon	639 637 636
Vestel	583 328 045 010
Vexa	301 231 211 022 005
Victor	310
Video System	231 211 005
Videocon	570
Videologic	324
Videologique	325 324 197 180
Videosat	184
Videotechnic	325 324 216
Videoton	178 174 074 010
Vidikron	213
Vidion	022
Vidtech	247 194
Viewpia	456 220

Marke	TV-Code
Viewsonic	553
Vinchi	637
Visiola	324
Vision	625 551 325 318 231 211 022
Visivo	845
Vistar	322
Vistron	563
Vityaz	015 014
Vivax	695 675 666 637 603 551 541 370 327 211
Vivid	666
Vizio	341 829
Vodafone	259
Vortec	231 211 005
Vortex	637 551 249
Vox	328
Voxson	381 247 231 211 187 052 050 015 005
Vu	624 329 017

W

Marke	TV-Code
Walker	328 010
Walkie	261
Waltham	325 231 180 178 171 145 082 074 328
Walton	014
Wansa	551
Watson	301 231 211 197 052 022 010 005 328

Marke	TV-Code
Watt Radio	324 213 180 135 123 079 057 052 050 028
Wega	381 231 211 194 193 187
Wegavox	301 231 211 184 123 022 005
Wellington	328
Welltech	296
Weltblick	325 231 211 005
Westinghouse	663 340 595 270
Westinghouse (Roku Tv)	663
Weston	231 211
Wharfedale	454 239 231 211 187 005
White-Westinghouse	324 231 180
Wilson	010
Windsor	010 328
Winston	022 005
Wintel	296
Winternitz	022
World-Tech	216
Worldview	022 005

X

Marke	TV-Code
Xiaomi	799

Marke	TV-Code
Xlogic	239
Xms	239
Xoceco	503
Xoro	788 705 700 698 697 677 676 473 451 363
Xrypton	231 211
X-View	319

Y

Marke	TV-Code
Yamaha	188
Yamishi	325 231 211
Yokan	231 211
Yoko	324 318 216 197 185 184 180 175 092 050 022 005
York	108 005
Yorx	197

Z

Marke	TV-Code
Zanussi	325 156 050 015
Zehnder	717
Zenith	030 005
Zephir	639 342